



Armrest for PASSAT B6-B7 (09/2005>)
Installation instructions

1st METHOD (Fast mounting)

- Position the bracket of the armrest at the end of the central tunnel.
- Secure the armrest with the tip screws with an hand screwdriver.

2nd METHOD (To encrease the hardness)

- Position the bracket of the armrest at the end of the central tunnel.
- Mark the 2 holes in the central tunnel plastic.
- Drill through the holes you have marked using 5.0 mm drill bit.
- Remove the central tunnel.
- Secure the armrest with the screws, the dice and the washers.




Bracciolo per PASSAT B6-B7 (09/2005>)
Istruzioni di montaggio

1° METODO (semplificato)

- Posizionare la staffa del bracciolo alla fine del tunnel centrale
- Avvitare le viti autofilettanti fornite con un cacciavite.

2° METODO (definitivo)

- Posizionare la staffa del bracciolo alla fine del tunnel centrale
- Segnare sulla plastica del tunnel centrale i 2 fori della staffa.
- Eseguire 3 fori precedentemente segnati con una punta di 5 mm.
- Smontare il tunnel centrale.
- Montare il bracciolo con le viti, i dadi e le rondelle.

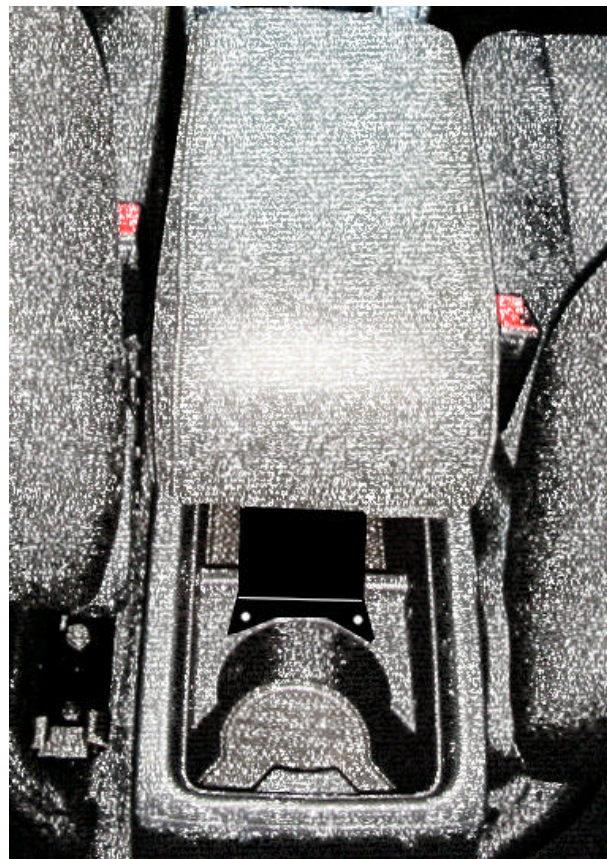

Armrest for PASSAT B6-B7 (09/2005>)
Installation instructions

1st METHOD (Fast mounting)

- Position the bracket of the armrest at the end of the central tunnel.
- Secure the armrest with the tip screws with an hand screwdriver.

2nd METHOD (To encrease the hardness)

- Position the bracket of the armrest at the end of the central tunnel.
- Mark the 2 holes in the central tunnel plastic.
- Drill through the holes you have marked using 5.0 mm drill bit.
- Remove the central tunnel.
- Secure the armrest with the screws, the dice and the washers.



Bracciolo per PASSAT B6-B7 (09/2005>)
Istruzioni di montaggio

1° METODO (semplificato)

- Posizionare la staffa del bracciolo alla fine del tunnel centrale
- Avvitare le viti autofilettanti fornite con un cacciavite.

2° METODO (definitivo)

- Posizionare la staffa del bracciolo alla fine del tunnel centrale
- Segnare sulla plastica del tunnel centrale i 2 fori della staffa.
- Eseguire 3 fori precedentemente segnati con una punta di 5 mm.
- Smontare il tunnel centrale.
- Montare il bracciolo con le viti, i dadi e le rondelle.

